


Patterns for *Menpô*. (Actual size) *

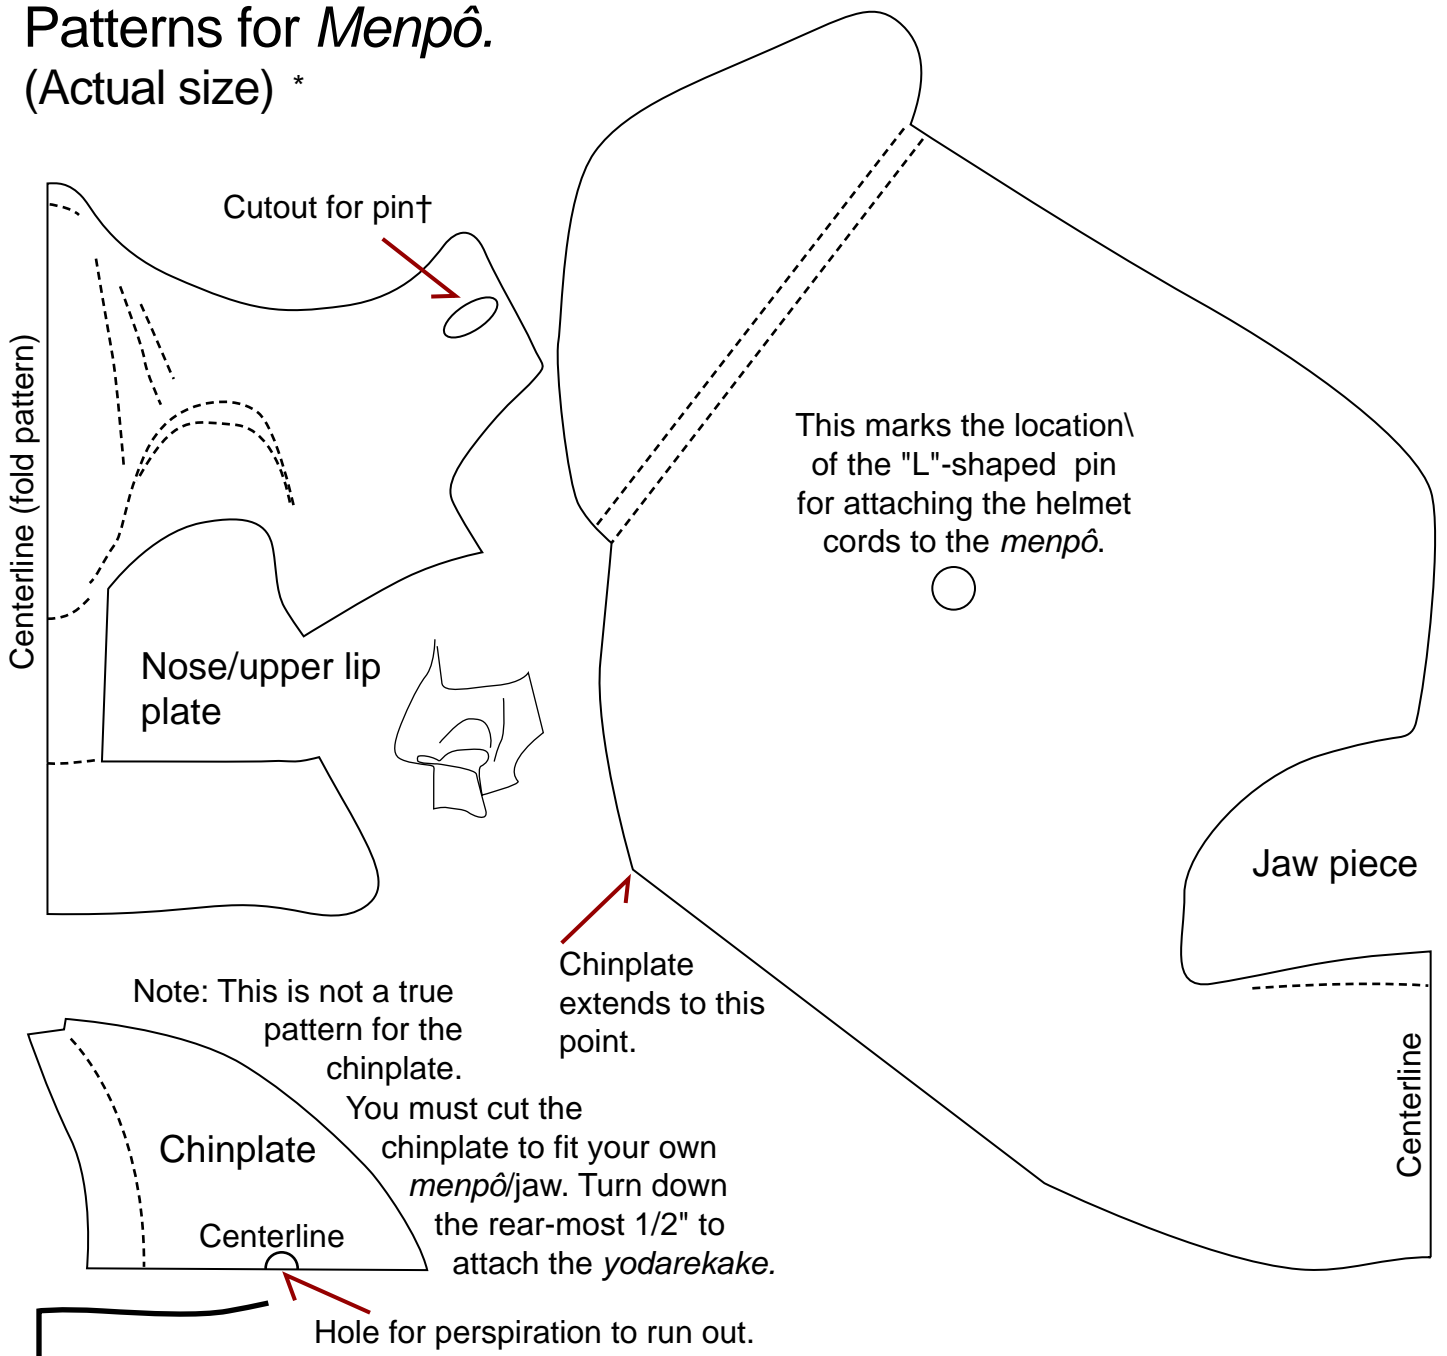

* This is meant to be a snug fit on the lower face. You may have to alter the measurements to attain a fit more appropriate to your own facial structure and size.

† The pin for attaching the nose should be placed on the *menpô* after first making the nose to fit; once this is done, place the nose over the *menpô* in its proper place, and use a Sharpie to mark the location of the pin. Open the hole and put in the rivet/pin. Remember that the nose should "spring" into place, so make the hole a smidge farther out from the mark you make.